















































 


 



 
















Original		Replacement		Original		Replacement	
	Power		Power		8		8
	Mute		Mute / Dimmer		9		9
	Play		Play / Slow		0		0
	Pause		Pause / Step / Freeze		Info		Info / Angle
	Stop		Stop / Hold		EPG		Guide / EPG / -/-
	Rec		Rec / Rec Mode		≡		Menu / Home
	<<		<< / Tune-		Source		AV / Input / RDS
	I<<		I<< / Preset-		Up		Up
	>>I		>>I / Preset+		Down		Down
	>>		>> / Tune+		Right		Right
	1		1		Left		Left
	2		2		OK		OK
	3		3		Exit		Exit / Cancel / Clear
	4		4		Smart		Smart / List
	5		5		←		Back / Return
	6		6		Vol+		Vol+
	7		7		P+		CH+ / Page+





Original	Replacement	Original	Replacement
	VOL 		
	Home 		
	P- 		
	Netflix 		
	You Tube 		
	Red 		
	Green 		
	Yellow 		
	Blue 		
	O)/I 		
	[=] 		
	Subt. 		

Original	Replacement	Original	Replacement

