


 


 
 








 
 
 

 
 






 


 







	Original	Replacement	Original	Replacement
	Power			
	Mute			
	Menu			
	VOD			
	TV			
	Info			
	Ajustes			
	Volver			
	Up			
	Down			
	Right			
	Left			
	OK			
	Stop			
	Play			
	Pause			
	>>	