 



Original	Replacement	Original	Replacement
 Power	 Power	 Red / Menu	 Red
 ><>	 Shift + Menu	 Red / Menu	 Shift + Format
 Source	 AV	 Green / Menu	 Green
 I - II	 Dual	 Green / Menu	 Shift + Dual
 Subtitles	 Subt	 Yellow / Other	 Yellow
 [ i+ ]	 Info	 Yellow / Other	 Menu
 [ ? ]	 D. Menu	 Blue / OK	 Blue
 Mix	 TV/R	 Blue / OK	 Ok
 Zoom	 Eject	 Special Audio	 Shift + Subt
 Time	 Shift + AV	 Text	 Text
 [ PP ]	 Back	 P -	 Ch -
 DNR	 Options	 P +	 Ch +
 Mosaic	 Guide	 Vol -	 Vol -
 Up	 Up	 Vol +	 Vol +
 Down	 Down	 1	 1
 Right	 Right	 2	 2
 Left	 Left	 3	 3

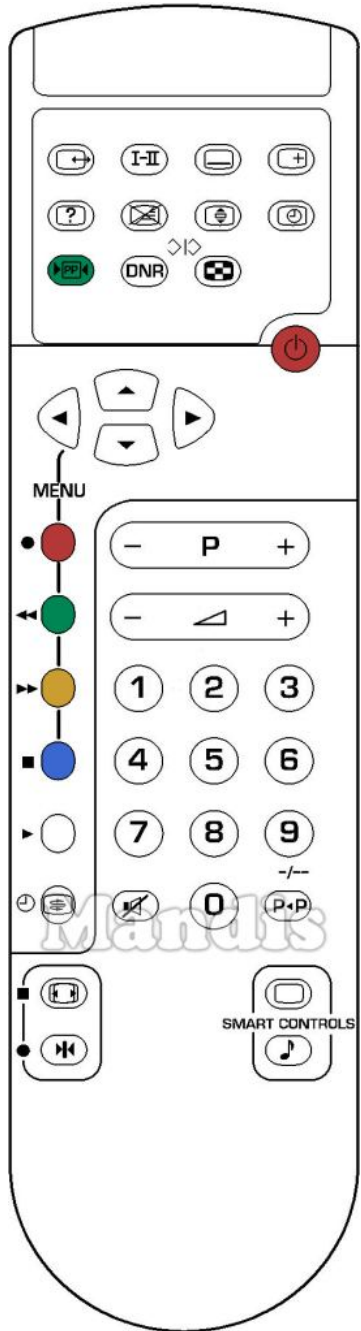



	Original	Replacement	Original	Replacement
	4			
	5			
	6			
	7			
	8			
	9			
	0			
	Mute			
	P < P			
	Format			
	Freeze			
	Smart Controls Picture			
	Smart Controls Audio			



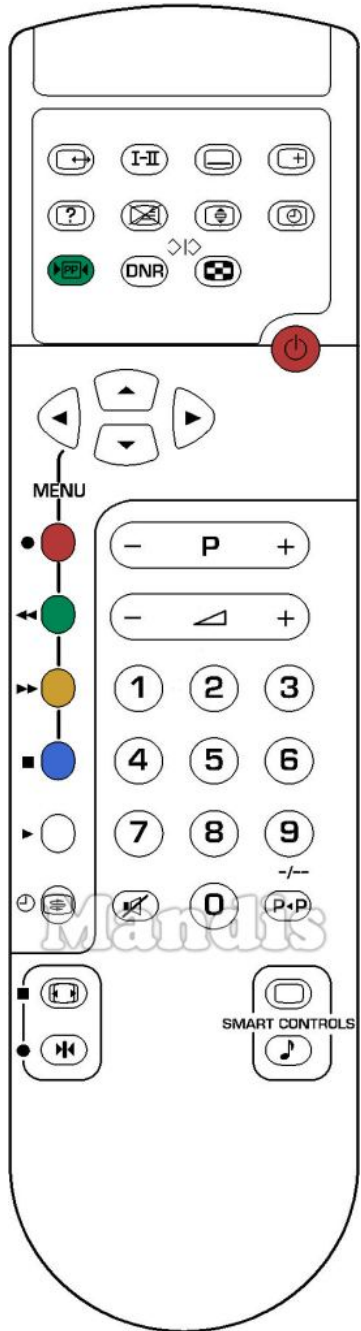 

Original	Replacement	Original	Replacement
	Power		Power
	Time		Stop
	Zoom		Play
	Mix		Timer
	Mix		Ch -
	[?]		Ch +
	[i+]		1
	Freeze/Rec		2
	Format/Stop		3
	Source		4
	I-II		5
	Up		6
	Down		7
	Right		8
	Left		9
	Rec		0
	<<		<<
	>>		>>
			-/--
			Guide

