





 
 

 

 

 

 






Original	Replacement	Original	Replacement
 Power	 Power	 P+	 Ch +
 1	 1	 P-	 Ch -
 2	 2	 Home	 Smart
 3	 3	 G	 Guide
 4	 4	 i	 Info
 5	 5	 Back	 Back
 6	 6	 Exit	 Exit
 7	 7	 Up	 Up
 8	 8	 Down	 Down
 9	 9	 Right	 Right
 0	 0	 Left	 Left
 Lang	 Dual	 OK	 Ok
 TXT	 Text	 Netflix	 Media
 Vol+	 Vol +	 YouTube	 Shift + Media
 Vol-	 Vol -	 *1	 Format
 Mute	 Mute	 Prime Video	 Shift + Smart
 Source	 AV	 Red	 Red





Original		Replacement	
	Green		Green
	Yellow		Yellow
	Blue		Blue
	<<		<<
	Pause		Pause
	>>		>>
	Rec		Rec
	Play		Play
	Stop		Stop

Original		Replacement	

