






 

 









 

 
 

 


Original	Replacement
	Power
	Mute / Dimmer
	TV/Radio /
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	AV / Input / RDS
	Fav / Marker / PC
	Up
	CH+ / Page+

Original	Replacement
	CH- / Page-
	Down
	Right
	Vol+
	Left
	Vol-
	OK
	Menu / Home
	Zoom / Size
	Audio / Lang I/II
	Info / Angle
	Sleep / Timer
	Back / Return
	Picture / Format
	Shift + Sleep / Timer
	Sound / Title
	Red / Netflix / Search





Original	Replacement
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Display / Media
	 Stop / Hold
	 Shift + Zoom /
	 Text / Goto
	 Subtitle / EQ
	 Shift + Text /
	 D.Menu / Top
	 Exit / Cancel / Clear
	 Shift + Back / Return

Original	Replacement

