








 











 













 

 





 



 

 






 







Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 FAV	 Fav / Marker / PC
 Internet	 Smart / List
 Tv/Radio	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Music/Movie/Pictu	 Display / Media
 LIB	 D.Menu / Top

Original	Replacement
 Vol+	 Vol+
 Vol-	 Vol-
 P↔P	 I<< / Preset-
 EPG	 Guide / EPG / -/-
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Info	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Back	 Back / Return
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 Rec	 Rec / Rec Mode
 Play	 Play / Slow





Original	Replacement
 Stop	 Stop / Hold
 <<	 << / Tune-
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Text	 Text / Goto
 SUBT.	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 OPT	 Setup / OPT /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Original	Replacement

