 

 

 



 

 
 
 

 

 

 

 
 
 
 
 
 
 

 
 
 
 
 
 




Original	Replacement
 Power	 Power
 List	 List
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TV/R	 TV/R
 Home	 Smart
 FAV	 Shift + Pre Ch
 Recall	 Pre Ch

Original	Replacement
 Audio	 Dual
 Vol +	 Vol +
 Vol -	 Vol -
 P +	 Shift + Ch +
 CH+	 Ch +
 P -	 Shift + Ch -
 Up	 Up
 CH-	 Ch -
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Menu	 Menu
 Info	 Info
 EPG	 Guide
 Exit	 Exit
 OPT	 Options





Original	Replacement	Original	Replacement
 Text	 Text		
 SUB	 Subt		
 Message	 Media		
 Pause	 Pause		
 Stop	 Stop		
 <<	 <<		
 >>	 >>		
 Rec	 Rec		
 Play	 Play		
 I<<	 I<<		
 >>I	 >>I		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

