



Original	Replacement	Original	Replacement
	Power		Vol+
	Energy Saving		Fav / Marker / PC
	AV Mode		CH+ / Page+
	Input		Vol-
	Tv/Rad		Zoom / Size
	1		Mute / Dimmer
	2		CH- / Page-
	3		Menu / Home
	4		Sound / Title
	5		D.Menu / Top
	6		Up
	7		Left
	8		OK
	9		Right
	List		Down
	0		Exit / Cancel / Clear
	Q.Vlew		Back / Return



