









 





 

 

 











 







	Original	Replacement
	Power	 Power
	F	 Menu / Home
	ASC(III)	 Setup / OPT /
	Vol+	 Vol+
	Standard	 Audio / Lang I/II
	Mute	 Mute / Dimmer
	Vol-	 Vol-
	Cinema	 Smart / List
	I<<	 I<< / Preset-
	Play	 Play / Slow
	Pause	 Pause / Step / Freeze
	>>I	 >>I / Preset+
	Rear Level+	 CH+ / Page+
	Woofer Level+	 Up
	Auto Power On	 Right
	Rear Level-	 CH- / Page-
	Woofer Level-	 Down

	Original	Replacement
	Auto Power Off	 Left

