
 

 

 

 



 












 
 
 
 

 









 



 

 
 

 

 



 

 






 












Original	Replacement	Original	Replacement
	Audio		Dual
	[]		Format
	Power		Power
	[*]/SV		Subt
	V≡/LP		Options
	[≡I]/000		Guide
	Mute/Timer		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	T		Smart
	Pause		Pause
	M		Menu
	E		3D
	i		Info
	Rec		Rec
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Red		Red
	<<		<<
	Green		Green
	Stop		Stop
	Yellow		Yellow
	Play		Play


 
 








 
 


 

 



 

 



 



 

 



 

 



 
 


 
 
 
 
 

 
 
 
 

 
 
 











Original	Replacement	Original	Replacement
	Blue		Blue
	>>		>>




 




Original	Replacement	Original	Replacement
 Mute/Timer	 Mute	 <<	 <<
 Power	 Power	 Stop	 Stop
 1	 1	 Play	 Play
 2	 2	 >>	 >>
 3	 3	 Pause	 Pause
 4	 4	 Rec	 Rec
 5	 5	 M	 Menu
 6	 6	 E	 3D
 7	 7	 Audio	 Dual
 8	 8	 [≡]/000	 Guide
 9	 9	 V≡/LP	 Options
 0	 0	 []	 Format
 Up	 Up	 [*]/SV	 Subt
 Down	 Down	 T	 Smart
 OK	 Ok	 i	 Info
 Right	 Right	 Red	 Red
 Left	 Left	 Green	 Green




 

 



 

 

 

 

 

 

 



 

 
 
 
 




 

 
 

 

 





 
 

 
 



 
 







Original	Replacement	Original	Replacement
 Yellow	 Yellow		
 Blue	 Blue		





Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[]		Format
	Audio		Dual
	[*]/SV		Subt
	V≡/LP		Options
	[=] /000		Guide
	Mute/Timer		Mute
	T		Smart
	M		Menu
	E		3D
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	<<		<<
	Stop		Stop
	Play		Play
	>>		>>
	Pause		Pause

