



| Original       | Replacement            |
|----------------|------------------------|
| POWER          | Power                  |
| INFO           | Info / Angle           |
| HDMI CONTROL   | Smart / List           |
| SLEEP          | Sleep / Timer          |
| SCREEN         | Picture / Format       |
| SOURCE         | AV / Input / RDS       |
| PRESETS        | Setup / OPT /          |
| 1              | 1                      |
| 2              | 2                      |
| 3              | 3                      |
| ZOOM/RED/▲     | Zoom / Size            |
| ZOOM/RED/▲     | Shift + CH+ /          |
| ZOOM/RED/▲     | Red / Netflix / Search |
| 4              | 4                      |
| 5              | 5                      |
| 6              | 6                      |
| REPEAT/GREEN/▼ | Shift + CH- / Page-    |

| Original       | Replacement                 |
|----------------|-----------------------------|
| REPEAT/GREEN/▼ | Green / APP / Repeat        |
| 7              | 7                           |
| 8              | 8                           |
| 9              | 9                           |
| ROOT/YELLOW    | Yellow / YouTube / Repeat   |
| RETURN         | Back / Return               |
| 0              | 0                           |
| MENU           | Menu / Home                 |
| TITLE/BUE      | Sound / Title               |
| TITLE/BUE      | Blue / Prime Video / Random |
| UP             | Up                          |
| LEFT           | Left                        |
| OK/SELECT      | OK                          |
| RIGHT          | Right                       |
| DOWN           | Down                        |
| P+             | CH+ / Page+                 |
| P-             | CH- / Page-                 |



