






















 





 

 






Original	Replacement
 Power	 Power
 Sleep	 Sleep
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 GUIDE
 Recall	 RETURN BACK
 Audio	 SOUND DUAL
 P.M.	 HOME SMART

Original	Replacement
 Info	 DISPLAY INFO
 Input	 TIMER AV
 Up / CH+	 Up
 Up / CH+	 + CH
 Down / CH-	 Down
 Down / CH-	 CH -
 Right / Vol+ / Enter	 Right
 Left / Vol-	 Left
 Left / Vol-	 VOL -
 Right / Vol+ / Enter	 + VOL
 Right / Vol+ / Enter	 OK
 Menu	 TOP MENU MENU
 Page+	 >>I
 Page-	 I<<
 Display	 SHIFT + DISPLAY INFO
 Exit	 CLEAR EXIT
 Red	 A





Original	Replacement	Original	Replacement
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Size	 Eject		
 Stop	 Stop		
 Reveal	 TV/R		
 Index	 Options		
 4:3 / 16:9	 Format		
 C.Lock	 Media		
 Sub.PG	 Subt		
 On/Mix/Off	 Text		

