 























































 













Original	Replacement	Original	Replacement
 Info	 Info / Angle	 0	 0
 Power	 Power	 Blue/Video	 Shift + 4
 TV	 TV/Radio /	 Blue/Video	 Blue / Prime Video / Random
 AV	 AV / Input / RDS	 Yellow/Sound	 Sound / Title
 R	 Shift + TV/Radio / Program	 Yellow/Sound	 Yellow / YouTube / Repeat
 F1	 Shift + 1	 PR+	 CH+ / Page+
 F2	 Shift + 2	 Up	 Up
 F3	 Shift + 3	 White	 Fav / Marker / PC
 1	 1	 Left	 Left
 2	 2	 OK	 OK
 3	 3	 Right	 Right
 4	 4	 Green/Timer	 Sleep / Timer
 5	 5	 Green/Timer	 Green / APP / Repeat
 6	 6	 PR-	 CH- / Page-
 7	 7	 Down	 Down
 8	 8	 Red/Recall	 Back / Return
 9	 9	 Red/Recall	 Red / Netflix / Search





Original	Replacement
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Pause	 Pause / Step / Freeze
 Exit	 Exit / Cancel / Clear
 Text	 Text / Goto
 EPG	 Guide / EPG / -/--
 Menu	 Menu / Home

Original	Replacement

