
 


 


















 
 




 





 
 

 



 
 


 

 



 
 



 

 


 


















 
 




 







Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Play	Menu Off	 Exit
Reveal	 Pause	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Info	 Info	Volume+	 Vol +
Subt.List	 Subt	Chan.Up	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 Dual
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Shift + Info	6	 6
Menu Left	 Left	7	 7



 

 


Original	Replacement	Original	Replacement
8	 8	Store	 Media
9	 9	Browse	 Smart
Guide -/-- 1.	 Guide	Tune+	 >>
0/10	 0		
2.Fav P/C 2.	 Pre Ch		
Red	 Red		
Green	 Green		
Yellow	 Yellow		
Blue	 Blue		
Tone+	 3D		
Off/Tim	 +  Shift + Sleep		
Mix Scan	 Format		
Game Coo	 +  Shift + Eject		
Disp	 List		
Search	 +  Shift + TV/R		
Tune-	 <<		
Aft/Caf	 +  Shift + Ok		



Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Play	Menu Off	 Exit
Reveal	 Pause	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Info	 Info	Volume+	 Vol +
Subt.List	 Subt	Chan.Up	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 Dual
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 +  Shift + Info	6	 6
Menu Left	 Left	7	 7



Original	Replacement	
8		8
9		9
Guide -/-- 1.		Guide
0/10		0
2.Fav P/C 2.		Pre Ch
Red		Red
Green		Green
Yellow		Yellow
Blue		Blue
On/Off	 + 	Shift + Power
Rotate Text	 + 	Shift + Mute
Tone+		3D
On/Tim	 + 	Shift + Subt
Off/Tim	 + 	Shift + Sleep
Mix Scan	 + 	Shift + TV/R
Color+ P.Std	 + 	Shift + Format
Store Text	 + 	Shift + Text

Original	Replacement	
AV 2	 + 	Shift + AV
Bright+ Mode	 + 	Shift + Menu
Search	 + 	Shift + Up
Tune-	 + 	Shift + Left
Disp		List
Tune+	 + 	Shift + Right
Bright- Sys	 + 	Shift + Exit
Store	 + 	Shift + Down
Input	 + 	Shift + Vol +
Contrast+	 + 	Shift + Ch +
Output	 + 	Shift + Vol -
Contrast-	 + 	Shift + Ch -
Color- S.Std	 + 	Shift + Dual
On Pip	 + 	Shift + 1
Swap	 + 	Shift + 2
Rotate Pip	 + 	Shift + 3
Still	 + 	Shift + 4



Original	Replacement	Original	Replacement
Dim Pip	 +  Shift + 5		
Help	 +  Shift + 6		
Camera	 +  Shift + 7		
Camera1	 +  Shift + 8		
3.*	 +  Shift + Guide		
View	 +  Shift + 0		
4.# 16:9	 Format		

