

















 

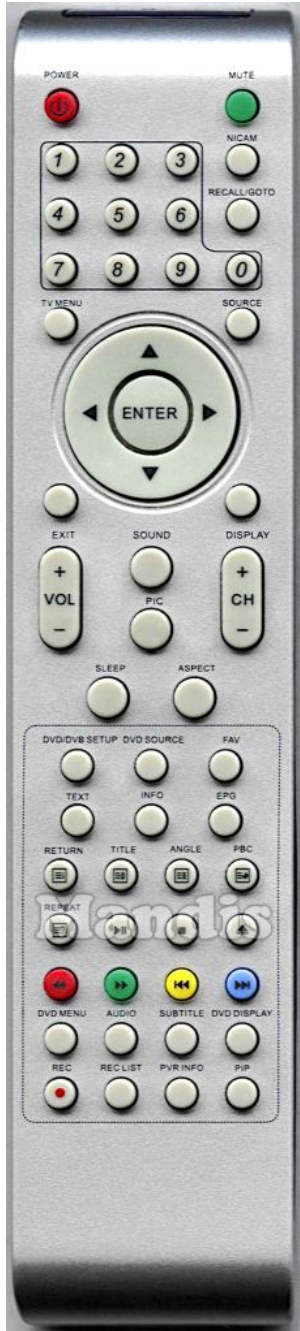 



| Original   | Replacement   |
|--|---|
|  Power        |  Power                     |
|  Mute         |  Mute / Dimmer             |
|  1            |  1                         |
|  2            |  2                         |
|  3            |  3                         |
|  Nicam        |  Shift + Audio / Lang I/II |
|  4            |  4                         |
|  5            |  5                         |
|  6            |  6                         |
|  Recall/Goto  |  Back / Return             |
|  Recall/Goto |  Shift + Text /           |
|  7          |  7                       |
|  8          |  8                       |
|  9          |  9                       |
|  0          |  0                       |
|  TV Menu    |  Menu / Home             |
|  Up         |  Up                      |

| Original  | Replacement  |
|---|--|
|  Source          |  AV / Input / RDS           |
|  Left            |  Left                       |
|  Enter           |  OK                         |
|  Right           |  Right                      |
|  Exit            |  Exit / Cancel / Clear      |
|  Down            |  Down                       |
|  Display         |  Display / Media            |
|  Vol+            |  Vol+                       |
|  Sound           |  Sound / Title              |
|  CH+             |  CH+ / Page+                |
|  Vol-           |  Vol-                      |
|  Pic           |  Picture / Format         |
|  CH-           |  CH- / Page-              |
|  Sleep         |  Sleep / Timer            |
|  Aspect        |  Shift + Picture / Format |
|  DVD/DVB Setup |  Setup / OPT /            |
|  DVD Source    |  Shift + AV / Input / RDS |





| Original  | Replacement  |
|---|--|
|  Fav             |  Fav / Marker / PC        |
|  Text            |  Text / Goto              |
|  Info            |  Info / Angle             |
|  EPG             |  Guide / EPG / -/--       |
|  Return / Index  |  Shift + Back / Return    |
|  Title / Size    |  Shift + Sound / Title    |
|  Title / Size    |  Zoom / Size              |
|  Angle / Hold    |  Shift + Stop /           |
|  PBC / Subcode   |  TV/Radio /               |
|  Repeat / Reveal |  Shift + Green / APP /    |
|  Play/Pause     |  Play / Slow             |
|  Stop          |  Stop / Hold            |
|  Open/Close    |  Eject / Surround       |
|  Red / <<      |  << / Tune-             |
|  Red / <<<     |  Red / Netflix / Search |
|  Green / >>>   |  >> / Tune+             |
|  Green / >>>   |  Green / APP / Repeat   |

| Original  | Replacement   |
|---|---|
|  Yellow / I<<< |  I<<< / Preset-              |
|  Yellow / I<<< |  Yellow / YouTube / Repeat   |
|  Blue / >>>I   |  >>>I / Preset+              |
|  Blue / >>>I   |  Blue / Prime Video / Random |
|  DVD Menu      |  D.Menu / Top                |
|  Audio         |  Audio / Lang I/II           |
|  Subtitle      |  Subtitle / EQ               |
|  DVD Display   |  Shift + Display / Media     |
|  Rec           |  Rec / Rec Mode              |
|  Rec List      |  Smart / List                |
|  PVR Info     |  Shift + Info / Angle       |
|  PIP         |  Shift + Smart / List      |

