



Original		Replacement		Original		Replacement	
	Power		Power		TV		Shift + 1
	1		1		Up / P+		Shift + Up
	2		2		Up / P+		Up
	3		3		AV		AV / Input / RDS
	4		4		Left / V-		Left
	5		5		Left / V-		Shift + Left
	6		6		Menu		Menu / Home
	7		7		Menu		Shift + Menu /
	8		8		Right / V+		Right
	9		9		Right / V+		Shift + Right
	Mute		Mute / Dimmer		S / M / D		Exit / Cancel / Clear
	0		0		Down / P-		Shift + Down
	16:9		Picture / Format		Down / P-		Down
	Red		Red / Netflix / Search		Recall		Back / Return
	Green		Green / APP / Repeat		Recall		Shift + Back / Return
	Yellow		Yellow / YouTube / Repeat		i		Info / Angle
	Blue		Blue / Prime Video / Random		EQ		Subtitle / EQ





Original		Replacement	
	≡i	 Shift + Info / Angle	
	PP	 Sound / Title	
	≡	 Text / Goto	
	/≡	 Setup / OPT /	
	Hold	 Stop / Hold	
	Size	 Zoom / Size	
	≡X	 Sleep / Timer	
	≡?	 D.Menu / Top	

Original	Replacement

