



Original	Replacement
Power	Power
Open/Close	Eject / Surround
Scan	Display / Media
Swap	Back / Return
Call	Shift + OK
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	Guide / EPG / -/--

Original	Replacement
TV/AV	AV / Input / RDS
P+	CH+ / Page+
TV/DVD	Smart / List
V-	Vol-
Menu	Menu / Home
V+	Vol+
Exit	Exit / Cancel / Clear
P-	CH- / Page-
P.STD	Picture / Format
Red/Picture	Shift + Picture / Format
Red/Picture	Red / Netflix / Search
Green/Sound	Sound / Title
Green/Sound	Green / APP / Repeat
Yellow/Time	Yellow / YouTube / Repeat
Blue/Function	Blue / Prime Video / Random
<<	<< / Tune-
>>	>> / Tune+





Original	Replacement
Power	Power
Open / Close	Eject / Surround
Scan	Shift + Setup / OPT / Tools
Swap	Back / Return
Call	Smart / List
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	Guide / EPG / -/--

Original	Replacement
TV/AV	AV / Input / RDS
I-II	Shift + Audio / Lang I/II
P+	CH+ / Page+
TV/DVD	Shift + 2
TV/DVD	Shift + 1
V-	Vol-
Menu	Menu / Home
V+	Vol+
Exit	Exit / Cancel / Clear
P-	CH- / Page-
P.Std	Picture / Format
Red / Picture	Red / Netflix / Search
Red / Picture	Shift + Picture / Format
Green / Sound	Green / APP / Repeat
Green / Sound	Shift + Sound / Title
Yellow / Time	Yellow / YouTube / Repeat
Yellow / Time	Sleep / Timer



