
 
 


 




 



 

 
 

 


 






 
 


 


Original	Replacement	Original	Replacement
On/Off	 Power	Back	 Back
Mute	 Mute	Volume+	 Vol +
Update	 Smart	Menu audio	 Dual
Txt Stop	 Stop	Chan.Up	 Ch +
Info	 Info	Volume-	 Vol -
Subt.List	 Subt	Chan.Down	 Ch -
Return TV	 TV/R	1	 1
Text	 Text	2	 2
Txt Expand	 Eject	3	 3
TV/AV	 AV	4	 4
Menu	 Menu	5	 5
Menu Up	 Up	6	 6
Menu Left	 Left	7	 7
OK Enter	 Ok	8	 8
Menu Right	 Right	9	 9
Menu Off	 Exit	Guide -/-- 1.	 Guide
Menu Down	 Down	0/10	 0



Original	Replacement	Original	Replacement
2.Fav P/C 2.	 Pre Ch		
Red	 Red		
Level L	 List		
Green	 Green		
Contrast+	 >>		
Contrast-	 <<		
Yellow	 Yellow		
Blue	 Blue		

