


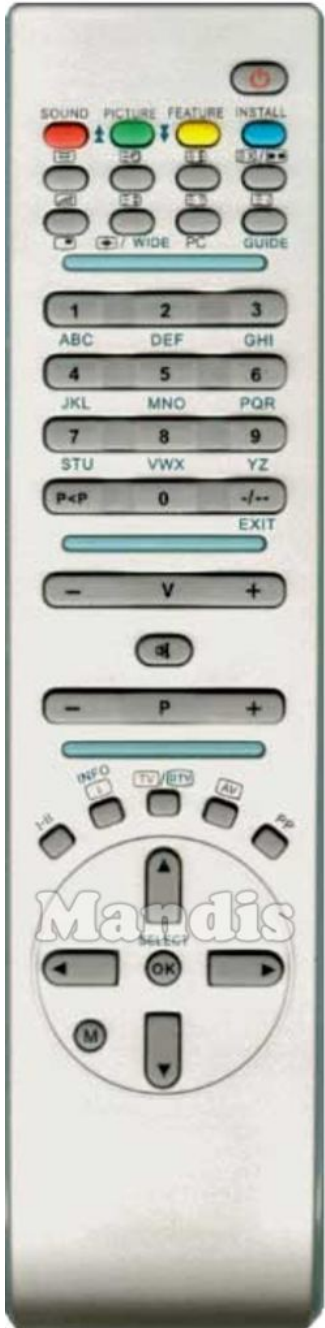


 





 






Original	Replacement	Original	Replacement
 Power	 Power	 5	 5
 Red/Sound ↑	 Red	 6	 6
 Green/Picture/↓	 Green	 7	 7
 Yellow/Feature	 Yellow	 8	 8
 Blue/Install	 Blue	 9	 9
 [=]	 REPEAT TEXT Text	 0	 0
 [=0]	 SETTINGS OPT Options	 P<P	 FAV PRE-CH Pre Ch
 [=+]	 AD SUBT Subt	 -/--	 SHIFT + -/-- Shift + Guide
 [=x]/[· ·]	 PICTURE FORMAT Format	 v +	 + VOL Vol +
 [ /≡]/[ *]	 RETURN BACK Back	 - v	 VOL - Vol -
 [+](≡♦)/Wide	 ECO 3D 3D	 MUTE	 MUTE Mute
 [=?]/PC	 HOME SMART Smart	 P +	 + CH Ch +
 [=i]/Guide	 -/-- GUIDE Guide	 - P	 CH - Ch -
 1	 1	 I-II	 SOUND DUAL Dual
 2	 2	 INFO [i]	 DISPLAY INFO Info
 3	 3	 TV/DTV	 SEARCH TV/R TV/R
 4	 4	 AV	 TIMER AV AV





Original		Replacement		Original	Replacement
	PP		Media		
	Up		Up		
	Down		Down		
	Right		Right		
	Left		Left		
	OK/Select		Ok		
	M		Menu		

