

 

 

 






 

 






 




 





 
 



 







 


 
 





Original	Replacement	Original	Replacement
	POWER		Power
	TV		TV/R
	VCR / AUX		Shift + TV/R
	SLEEP		Sleep
	TV / AV		AV
	TUNER / BAND		Smart
	DVD / CD		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	≧10 / -/-		Guide
	Cancel		Exit
	CH +		Ch +
	CH -		Ch -
	VOL +		Vol +
	VOL -		Vol -
	SKIP PREV.		I<<
	SKIP NEXT		>>I
	SLOW/SEARCH		<<
	SLOW/SEARCH		>>
	STOP		Stop
	PAUSE		Pause
	PLAY		Play
	TOP MENU / DIR. NAV.		D. Menu
	MENU / PLAY LIST		Menu
	UP		Up
	LEFT		Left





Original	Replacement
 ENTER	 Ok
 RIGHT	 Right
 DOWN	 Down
 DISPLAY / TV VOL-	 Info
 DISPLAY / TV VOL-	 Shift + Vol -
 RETURN / TV VOL+	 Shift + Vol +
 RETURN / TV VOL+	 Back
 SUBWOOFER LEVEL	 3D
 SFC	 Green
 SUPER SRND	 Shift + 1
 SUPER SRND	 Format
 DOLBY PL. II	 Dual
 DOLBY PL. II	 Shift + Subt
 C. S. M.	 Red
 POSITION MEMORY	 Pre Ch
 AUDIO	 Shift + Dual
 AUDIO	 Eject

Original	Replacement
 SETUP	 Options
 MUTING	 Mute
 FL DISPLAY	 Shift + Info
 PAGE	 Shift + 2
 GROUP	 Shift + 3
 REPEAT	 Text
 PLAY MODE	 Shift + Play
 TEST	 Yellow
 CH. SELECT	 List
 QUICK REPLAY	 Blue
 SUBTITLE	 Subt







 


 







 



 



 

 


 





 


 




Original		Replacement		Original		Replacement	
	Power		Power		Tv Vol-		Vol -
	Power AV		Shift + Power				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	≥ 10 / -/-		Guide				
	Tv/AV		AV				
	CH+		Ch +				
	CH-		Ch -				
	Tv Vol+		Vol +				





Original	Replacement
 Power	 Power
 Power AV	 Shift + Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 ≥ 10 / -/-	 GUIDE
 SKIP >>	 >>
 SKIP <<	 <<
 SLOW/SEARCH <<	 <<
 SEARCH >>	 >>

Original	Replacement
 Pause	 Pause
 Play	 Play
 Stop	 Stop

