



Original		Replacement		Original		Replacement	
	Power		Power		9		9
	Power TV	+	Shift + Power		PIP		Picture / Format
	Tv Vol+		Vol+		Cancel	+	Shift + Exit / Cancel / Clear
	Open/Close		Eject / Surround		0		0
	AV Input TV		AV / Input / RDS		Audio		Audio / Lang I/II
	Tv Vol-		Vol-		Secondary		Sound / Title
	Internet		Smart / List		<< Search		<< / Tune-
	1		1		Play		Play / Slow
	2		2		Search >>		>> / Tune+
	3		3		I<< Skip		I<< / Preset-
	Skype	+	Shift + Green / APP /		Pause		Pause / Step / Freeze
	4		4		Skip >>I		>>I / Preset+
	5		5		Status		Info / Angle
	6		6		Stop		Stop / Hold
	3D	+	Shift + 3		Exit		Exit / Cancel / Clear
	7		7		Pop-Up Menu		Display / Media
	8		8		Top Menu		D.Menu / Top





Original	Replacement	Original	Replacement
	Up		Up
	Home		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	Option		Setup / OPT /
	Down		Down
	Return		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

