
 





 









 











 






 
 
 



 



	Original	Replacement		Original	Replacement
		Power		Power	Power
		Mute		Mute	Mute
		Pic Size		Format	Format
		Pic Mode		Shift + Format	Shift + Format
		Sleep		Sleep	Sleep
		Dual I-II		Dual	Dual
		S.Mode		Shift + Dual	Shift + Dual
		Still		Pause	Pause
		1		1	1
		2		2	2
		3		3	3
		4		4	4
		5		5	5
		6		6	6
		7		7	7
		8		8	8
		9		9	9
		0		0	0
		Guide		Guide	Guide
		Pre Ch		Pre Ch	Pre Ch
		S.Swap		I<<	I<<
		Options		Options	Options
		P.Input		>>	>>
		P.Position		>>I	>>I
		P.Size		Subt	Subt
		P.Swap		<<	<<
		TV/R		TV/R	TV/R
		Media		Media	Media
		Smart		Smart	Smart
		AV		AV	AV
		Menu		Menu	Menu
		Exit		Exit	Exit
		Text		Text	Text
		Shift + Text		Shift + Text	Shift + Text





Original	Replacement
	 Up
	 Ch +
	 Down
	 Ch -
	 Right
	 Vol +
	 Left
	 Vol -
	 Ok
	 Red
	 Green
	 Yellow
	 Blue
	 Shift + Smart
	 List
	 Stop
	 Back

Original	Replacement
	 Info
	 Shift + AV
	 Eject
	 D. Menu

