






 

 

 



 
 


 



 













 



 

 



 


 
 



 
















Original	Replacement	Original	Replacement
 Standby	 Power	 Tv/Radio	 TV/R
 Source	 AV	 Display	 Info
 1	 1	 Menu	 Menu
 2	 2	 Exit	 Exit
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 OK	 Ok
 8	 8	 Vol+	 Vol +
 9	 9	 Vol-	 Vol -
 0/10	 0	 Mute	 Mute
 FAV/Program	 Pre Ch	 EPG	 Guide
 Recall/10+	 Back	 Media	 Media
 P.Mode	 Format	 CH+	 Ch +
 S.Mode	 Shift + Dual	 CH-	 Ch -
 Sleep	 Sleep	 Rec	 Rec





Original	Replacement	Original	Replacement
 T.Shift	 Smart	 Green/A-B	 Green
 I/II/Audio	 Dual	 Yellow/Angle	 Yellow
 Size/Aspect	 3D	 Blue/Repeat	 Blue
 D.Setup	 Options		
 D.Menu	 D. Menu		
 Title	 Text		
 Eject	 Eject		
 Play	 Play		
 Pause/Hold	 Pause		
 Stop/Reveal	 Stop		
 <</Text	 <<		
 >>/Subpage	 >>		
 I<</Index	 I<<		
 >>I/Mix	 >>I		
 Zoom	 Shift + Eject		
 Subtitle	 Subt		
 Red/Goto	 Red		

