



Original	Replacement	Original	Replacement
Standby	Power	Loudness	Sound / Title
Mute	Mute / Dimmer	Memory	Picture / Format
Search	Red / Netflix / Search	Function	OK
CD/USB	Eject / Surround	1	1
Source	AV / Input / RDS	2	2
Repeat	Green / APP / Repeat	3	3
Intro	Shift + OK	4	4
Random	Blue / Prime Video / Random	5	5
Stop	Stop / Hold	6	6
CH+	CH+ / Page+	7	7
>>I	>>I / Preset+	8	8
CH-	CH- / Page-	9	9
I<<	I<< / Preset-	0	0
<</FF-	<< / Tune-	10+	Guide / EPG / -/-
>>/FF+	>> / Tune+	Prog	TV/Radio /
Play/Pause	Play / Slow	Vol-	Vol-
DSP	D.Menu / Top	Vol+	Vol+



Menu