



Original		Replacement		Original		Replacement	
	Power		Power		Vol +		Vol+
	Mute		Mute / Dimmer		MTS		Info / Angle
	1		1		CH +		CH+ / Page+
	2		2		Vol -		Vol-
	3		3		Aspect		Shift + Picture / Format
	4		4		CH -		CH- / Page-
	5		5		Guide		Guide / EPG / -/-
	6		6		Home		Shift + Menu / Home
	7		7		Rec		Rec / Rec Mode
	8		8		Menu		Menu / Home
	9		9		Up		Up
	List		Smart / List		Source		AV / Input / RDS
	0		0		Left		Left
	Recall		Back / Return		Enter		OK
	P.Mode		Picture / Format		Right		Right
	S.Mode		Sound / Title		Exit		Exit / Cancel / Clear
	Sleep		Sleep / Timer		Down		Down





Original	Replacement		
	Display		Display / Media
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	<< / Index		<< / Tune-
	Play/Pause /		Pause / Step / Freeze
	Play/Pause /		Shift + Exit / Cancel / Clear
	Play/Pause /		Play / Slow
	>> / TTX		>> / Tune+
	>> / TTX		Text / Goto
	I<< / SUB.PG		I<< / Preset-
	>>I / Reveal		>>I / Preset+
	Stop / Mix		Stop / Hold
	CAP		D.Menu / Top
	Subtitle		Subtitle / EQ
	TV / Radio		TV/Radio /

Original	Replacement		
	FAV		Fav / Marker / PC
	Size / Mouse		Zoom / Size
	Hold / Refresh		Shift + Stop /

