




















 





Original	Replacement	Original	Replacement
Txt Stop	 Stop / Hold	Back	 Back / Return
Info	 Info / Angle	Volume+	 Vol+
Subt.List	 Subtitle / EQ	Chan.Up	 CH+ / Page+
Sleep Timer	 Sleep / Timer	Volume-	 Vol-
Return TV	 TV/Radio /	Menu audio	 Audio / Lang I/II
Menu video	 D.Menu / Top	Chan.Down	 CH- / Page-
Text	 Text / Goto	1	 1
Txt Expand	 Zoom / Size	2	 2
TV/AV	 AV / Input / RDS		
Menu	 Menu / Home		
Menu Up	 Up		
On/Off	 Power		
Menu Left	 Left		
OK Enter	 OK		
Menu Right	 Right		
Menu Off	 Exit / Cancel / Clear		
Menu Down	 Down		

