



Original	Replacement	Original	Replacement
PWR	Power	Pause	Pause / Step / Freeze
Info	Info / Angle	Stop/Return	Stop / Hold
Zoom	Zoom / Size	1	1
DVD/USB/CD/D	Smart / List	2	2
Title	Shift + Sound / Title	3	3
Up	Up	4	4
CH+ / Page+	CH+ / Page+	5	5
Menu	Menu / Home	6	6
A-B/Language	Audio / Lang I/II	7	7
Left	Left	8	8
Enter	OK	9	9
Right	Right	0	0
REP/PR List	Display / Media	+10	Guide / EPG / -/-
Setup	Setup / OPT /	Goto/Search	Red / Netflix / Search
CH- / Page-	CH- / Page-	I<< / FAV-PR	I<< / Preset-
Down	Down	>>I	>>I / Preset+
Play	Play / Slow	<< / Guide	<< / Tune-





Original	Replacement	Original	Replacement
>>/EPG	>> / Tune+		
SUB-T	Subtitle / EQ		
Angle/Teletext	Text / Goto		
Audio	Sound / Title		
Slow/Tv/Radio	TV/Radio /		

Original	Replacement

