 



 


 
 









Original	Replacement	Original	Replacement
 Power	 Power	 Input	 AV / Input / RDS
 Mute	 Mute / Dimmer	 Left	 Left
 Red	 Red / Netflix / Search	 Enter	 OK
 Green	 Green / APP / Repeat	 Right	 Right
 Yellow	 Yellow / YouTube / Repeat	 Exit	 Exit / Cancel / Clear
 Blue	 Blue / Prime Video / Random	 Down	 Down
 YPbPr	 Shift + 3	 TV Display	 Display / Media
 MTS	 Audio / Lang I/II	 Vol+	 Vol+
 VGA	 Shift + 2	 S.M	 Sound / Title
 TV	 Shift + 1	 CH+	 CH+ / Page+
 AV	 Shift + AV / Input / RDS	 Vol-	 Vol-
 HDMI	 Shift + 0	 P.M	 Picture / Format
 EPG	 Guide / EPG / -/--	 CH-	 CH- / Page-
 Aspect	 Setup / OPT /	 1	 1
 Aspect	 Shift + Picture / Format	 2	 2
 Menu	 Menu / Home	 3	 3
 Up	 Up	 4	 4

Original	Replacement	Original	Replacement
 Power	 MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG I/II	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 ZOOM	 SLEEP	 TV RADIO
 TOP MENU	 OPT-TOOLS	 GOTO	 RDS
 D.MENU	 SETUP	 TEXT	 AV INPUT
 HOME	 ANGLE	 INFO	
 MENU	 OK	 RETURN	 BACK
 CLEAR	 EXIT	 CANCEL	
 VOL +	 SMART	 MEDIA	 CH PAGE +
 VOL -	 DISPLAY	 TV	 DVD
 CH +	 CH PAGE +	 CO- STB	 TAPE
 CH -	 CH PAGE -	 VIDEO	 TUNER
 1	 AUX-HDD	 USB	 BLUETOOTH
 2	 GUIDE EPG	 HDMI - BAT	 PC
3	NETFLIX	APP	YouTube
4	REPEAT	REPEAT A-B	RANDOM





Original	Replacement	Original	Replacement
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
	●	PC FAV MARKER	Fav / Marker / PC
0	0	HDMI - BAT 0	0
RECALL	Recall	RETURN BACK	Back / Return





 

 

 

 





 

 

 







Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 YPbPr	 Shift + Menu /
 CC	 Subtitle / EQ
 MTS	 D.Menu / Top
 VGA	 Sleep / Timer
 DTV strength	 Setup / OPT /
 TV	 Shift + 1
 AV	 AV / Input / RDS
 HDMI	 Shift + 0
 CHList	 Smart / List
 EPG	 Guide / EPG / -/--
 FAV	 Fav / Marker / PC

Original	Replacement
 Aspect	 Zoom / Size
 Menu	 Menu / Home
 Up	 Up
 Source	 Shift + AV / Input / RDS
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Tv Display	 TV/Radio /
 Vol+	 Vol+
 S.M	 Sound / Title
 CH+	 CH+ / Page+
 Vol-	 Vol-
 P.M	 Picture / Format
 CH-	 CH- / Page-
 1	 1





	Original	Replacement	Original	Replacement
	2	 2		
	3	 3		
	4	 4		
	5	 5		
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	.	 Shift + Guide / EPG / -/--		
	0	 0		
	Recall	 Back / Return		

