
 


 
 
 


 
 

 

 

 
 
 



 
 
 
 


 
 

 



 
 
 

 
 

 
 
 




Original	Replacement	Original	Replacement
 Standby	 Power	 Timer	 AV
 Teletext	 Text	 Menu	 Menu
 Red	 Red	 Mute	 Mute
 Green/[] Smart	 Green	 P<P	 Pre Ch
 Yellow/♪ Smart	 Yellow	 OK	 Ok
 Blue	 Blue	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 P+	 Ch +
 5	 5	 P-	 Ch -
 6	 6	 Vol+	 Vol +
 7	 7	 Vol-	 Vol -
 8	 8	 Play	 Play
 9	 9	 Stop	 Stop
 0	 0	 Record/OTR	 Rec
 Clear	 Exit	 <<	 <<



