



| Original |       | Replacement |                   | Original |   | Replacement |   |
|----------|-------|-------------|-------------------|----------|---|-------------|---|
|          | RC    |             | D.Menu / Top      |          | 2 |             | 2 |
|          | M     |             | Menu / Home       |          | 3 |             | 3 |
|          | F     |             | Smart / List      |          | 4 |             | 4 |
|          | Power |             | Power             |          | 5 |             | 5 |
|          | E     |             | Display / Media   |          | 6 |             | 6 |
|          | i     |             | Info / Angle      |          | 7 |             | 7 |
|          | ⌚     |             | Sleep / Timer     |          | 8 |             | 8 |
|          | TV    |             | TV/Radio /        |          | 9 |             | 9 |
|          | Up    |             | Up                |          | 0 |             | 0 |
|          | Left  |             | Left              |          |   |             |   |
|          | OK    |             | OK                |          |   |             |   |
|          | Right |             | Right             |          |   |             |   |
|          | Down  |             | Down              |          |   |             |   |
|          | Mute  |             | Mute / Dimmer     |          |   |             |   |
|          | A     |             | Audio / Lang I/II |          |   |             |   |
|          | R     |             | Back / Return     |          |   |             |   |
|          | 1     |             | 1                 |          |   |             |   |

