 

 

 

 

 







 



 



 

 

 

 







| Original   | Replacement   | Original  | Replacement   |
|--|---|---|---|
|  Power          |  Power                         |  Link Vieta    |  Smart / List            |
|  Input TV       |  TV/Radio /                    |  Option        |  Setup / OPT /           |
|  Input Av       |  AV / Input / RDS              |  Direct Tv Rec |  Shift + Rec / Rec Mode  |
|  Guide          |  Guide / EPG / -/--            |  1             |  1                       |
|  Up             |  Up                            |  2             |  2                       |
|  Exit           |  Exit / Cancel / Clear         |  3             |  3                       |
|  Left           |  Left                          |  4             |  4                       |
|  OK             |  OK                            |  5             |  5                       |
|  Right          |  Right                         |  6             |  6                       |
|  Menu          |  Menu / Home                  |  7            |  7                      |
|  Down         |  Down                        |  8           |  8                     |
|  Return       |  Back / Return               |  9           |  9                     |
|  Red          |  Red / Netflix / Search      |  i           |  Info / Angle          |
|  Green        |  Green / APP / Repeat        |  0 / VCR     |  0                     |
|  Yellow       |  Yellow / YouTube / Repeat   |  0 / VCR     |  Shift + 4 / Shift + 4 |
|  Blue         |  Blue / Prime Video / Random |  Mute        |  Mute / Dimmer         |
|  [ + ]/Aspect |  Picture / Format            |  CH+         |  CH+ / Page+           |

| Original  | Replacement   | Original  | Replacement   |
|---|---|---|---|
|  Link Vieta    |  Smart / List            |  Option    |  Setup / OPT /   |
|  Direct Tv Rec |  Shift + Rec / Rec Mode  |  1         |  1               |
|  2             |  2                       |  3         |  3               |
|  4             |  4                       |  5         |  5               |
|  6             |  6                       |  7        |  7              |
|  8           |  8                     |  9       |  9             |
|  i           |  Info / Angle          |  0 / VCR |  0             |
|  0 / VCR     |  Shift + 4 / Shift + 4 |  Mute    |  Mute / Dimmer |
|  CH+         |  CH+ / Page+           |   |   |





| Original       | Replacement           |
|----------------|-----------------------|
| Vol+           | Vol+                  |
| CH-            | CH- / Page-           |
| Vol-           | Vol-                  |
| [≡]/Text       | Text / Goto           |
| [≡♦]/STTL      | Subtitle / EQ         |
| [≡i]/Index     | Display / Media       |
| [≡+]/Hold      | Shift + Stop /        |
| Power DVD      | Shift + Power         |
| Rec DVD        | Rec / Rec Mode        |
| Programme Down | Shift + CH- /         |
| Programme Up   | Shift + CH+ /         |
| <</I<< DVD     | << / Tune-            |
| <</I<< DVD     | I<< / Preset-         |
| >>/>>I DVD     | >>I / Preset+         |
| >>/>>I DVD     | >> / Tune+            |
| Stop DVD       | Stop / Hold           |
| Pause/Step DVD | Pause / Step / Freeze |

| Original | Replacement |
|----------|-------------|
| Play DVD | Play / Slow |





| Original       | Replacement           |
|----------------|-----------------------|
| Power DVD      | Power                 |
| Rec DVD        | Rec / Rec Mode        |
| Programme Down | CH- / Page-           |
| Programme Up   | CH+ / Page+           |
| I<< DVD        | I<< / Preset-         |
| I<< DVD        | << / Tune-            |
| >>I DVD        | >>I / Preset+         |
| >>I DVD        | >> / Tune+            |
| Stop DVD       | Stop / Hold           |
| Pause/Step DVD | Pause / Step / Freeze |
| Play DVD       | Play / Slow           |
|                |                       |
|                |                       |
|                |                       |
|                |                       |
|                |                       |
|                |                       |
|                |                       |
|                |                       |
|                |                       |
|                |                       |
|                |                       |

| Original | Replacement |
|----------|-------------|
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |





| Original       | Replacement           | Original | Replacement |
|----------------|-----------------------|----------|-------------|
| Power VCR      | Power                 |          |             |
| Rec VCR        | Rec / Rec Mode        |          |             |
| Programme Down | CH- / Page-           |          |             |
| Programme Up   | CH+ / Page+           |          |             |
| <</I<< VCR     | I<< / Preset-         |          |             |
| <</I<< VCR     | << / Tune-            |          |             |
| >>/>>I VCR     | >> / Tune+            |          |             |
| >>/>>I VCR     | >>I / Preset+         |          |             |
| Stop VCR       | Stop / Hold           |          |             |
| Pause/Step VCR | Pause / Step / Freeze |          |             |
| Play VCR       | Play / Slow           |          |             |
|                |                       |          |             |
|                |                       |          |             |
|                |                       |          |             |
|                |                       |          |             |
|                |                       |          |             |
|                |                       |          |             |
|                |                       |          |             |
|                |                       |          |             |
|                |                       |          |             |

