



 

Original	Replacement	Original	Replacement
	Power		Power
	Input TV		TV/Radio /
	Input Av		AV / Input / RDS
	Guide		Guide / EPG / -/--
	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Return		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[+]/Aspect		Picture / Format

Original	Replacement	Original	Replacement
	Link Vieta		Smart / List
	Option		Setup / OPT /
	Direct Tv Rec		Shift + Rec / Rec Mode
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	i		Info / Angle
	0/VCR		0
	0/VCR		Shift + 4
	Mute		Mute / Dimmer
	CH+		CH+ / Page+







 

 





 

 

 






Original	Replacement
 Vol+	 Vol+
 CH-	 CH- / Page-
 Vol-	 Vol-
 [=]/Text	 Text / Goto
 [=◇]/STTL	 Subtitle / EQ
 [=i]/Index	 Display / Media
 [=+]/Hold	 Shift + Stop /
 Power DVD	 Shift + Power
 Rec DVD	 Rec / Rec Mode
 Programme Down	 Shift + CH- /
 Programme Up	 Shift + CH+ /
 <</I<< DVD	 << / Tune-
 <</I<< DVD	 I<< / Preset-
 >>/>>I DVD	 >>I / Preset+
 >>/>>I DVD	 >> / Tune+
 Stop DVD	 Stop / Hold
 Pause/Step DVD	 Pause / Step / Freeze

Original	Replacement
 Play DVD	 Play / Slow





Original	Replacement	Original	Replacement
 Power DVD	 Power		
 Rec DVD	 Rec / Rec Mode		
 Programme Down	 CH- / Page-		
 Programme Up	 CH+ / Page+		
 I<< DVD	 I<< / Preset-		
 I<< DVD	 << / Tune-		
 >>I DVD	 >>I / Preset+		
 >>I DVD	 >> / Tune+		
 Stop DVD	 Stop / Hold		
 Pause/Step DVD	 Pause / Step / Freeze		
 Play DVD	 Play / Slow		





Original	Replacement	Original	Replacement
 Power VCR	 Power		
 Rec VCR	 Rec / Rec Mode		
 Programme Down	 CH- / Page-		
 Programme Up	 CH+ / Page+		
 <</I<< VCR	 I<< / Preset-		
 <</I<< VCR	 << / Tune-		
 >>/>>I VCR	 >> / Tune+		
 >>/>>I VCR	 >>I / Preset+		
 Stop VCR	 Stop / Hold		
 Pause/Step VCR	 Pause / Step / Freeze		
 Play VCR	 Play / Slow		

