



Original	Replacement
	Power
	Guide
	Tv Input
	AV Input
	Menu
	Text
	[≡◆]/STTL
	[+]/Aspect
	i
	Exit
	Netflix
	APPS
	Left
	Up
	Right
	Home
	OK

Original	Replacement
	Option
	Down
	Back/Return
	Red
	Green
	Yellow
	Blue
	Vol+
	Mute
	PR+
	Vol-
	PR-
	1
	2
	3
	4
	5





	Original	Replacement	Original	Replacement
	6	6		
	7	7		
	8	8		
	9	9		
	?/Help	D.Menu / Top		
	0	0		
	Last View	Fav / Marker / PC		
	<<	<< / Tune-		
	Play	Play / Slow		
	>>	>> / Tune+		
	I<<	I<< / Preset-		
	Pause	Pause / Step / Freeze		
	>>I	>>I / Preset+		
	Stop	Stop / Hold		
	Rec	Rec / Rec Mode		

