










 
 
 
 
 


 


 

 

 
 







 


 



 



 

 

 
 
 

 





 

 

 

 
 





 
 


Original		Replacement		Original		Replacement	
	Power		Power		7		7
	TV		Shift + TV/R		8		8
	VCR/AUX		Shift + Options		9		9
	Sleep		Sleep		0		0
	Tv/AV		AV		≥10 / -/-		Guide
	Tuner/Band		TV/R		Cancel		Exit
	DVD/CD		Pre Ch		I<< Skip		I<<
	FL		Shift + Info		Skip >>I		>>I
	Play Mode-Mix		Shift + Play		<< Slow/Search		<<
	Repeat		Text		Slow/Search >>		>>
	Position		D. Menu		Stop		Stop
	1		1		Pause		Pause
	2		2		Play		Play
	3		3		Top Menu/Direct Navigator		Media
	4		4		Menu/Play List		Menu
	5		5		Display		Info
	6		6		Return		Back





Original	Replacement
	 Up
	 Down
	 Right
	 Left
	 Ok
	 Vol +
	 Vol -
	 Mute
	 Options
	 Subt
	 List
	 Red
	 Green
	 Yellow
	 Smart
	 Format
	 Eject

Original	Replacement
	 Blue
	 Dual





Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	≥10 / -/-		Guide
	Tv/AV		AV
	CH+		Ch +
	CH-		Ch -
	Tv Vol+		Vol +
	Tv Vol-		Vol -





Original		Replacement	
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	≥10 / -/--		Guide
	>>		>>
	<<		<<
	<<		<<
	>>		>>
	Pause		Pause

Original		Replacement	
	Play		Play
	Stop		Stop

