
 






 
 


 



 

 










Original	Replacement
 Power	 Power
 Mode DVB	 TV/R
 Direct TV Rec	 Rec
 Guide	 Guide
 TV / AV	 AV
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Menu	 Menu
 Exit	 Exit
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Text	 Text

Original	Replacement
 STTL / FP	 Subt
 Index	 Shift + Info
 Hold	 Shift + Stop
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0 / VCR	 0
 C	 Back
 i	 Info
 CH +	 Ch +
 CH -	 Ch -



