



Original	Replacement	Original	Replacement
	Power		Power
	Sleep		Sleep / Timer
	Dimmer		Shift + Mute / Dimmer
	USB		8
	CD		3
	Radio		TV/Radio /
	I<</<<		<< / Tune-
	Play/Pause		Play / Slow
	>>/>>		Blue / Prime Video / Random
	Stop		Stop / Hold
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Setup		Setup / OPT /
	Display		Display / Media
	Sound		Sound / Title
	Play Menu		Menu / Home
			Album Down
			Album Up
			OK
			CH- / Page-
			CH+ / Page+
			OK

