 





Original	Replacement	Original	Replacement
	Power		Power
	Sleep		Sleep / Timer
	O/Play		Subtitle / EQ
	Play		Play / Slow
	Clock/Timer		Shift + Sleep / Timer
	Program		TV/Radio /
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Del		Exit / Cancel / Clear
	+10		Guide / EPG / -/--
	iPod		Red / Netflix / Search
	CD		Shift + 3
	Radio/Ext In		Green / APP / Repeat
	I<<		I<< / Preset-
	Pause		Pause / Step / Freeze
	>>I		>>I / Preset+
	<<		<< / Tune-
	Stop		Stop / Hold
	>>		>> / Tune+
	Sound		Sound / Title
	D.Bass		D.Menu / Top
	Preset EQ		Setup / OPT /
	Display/Dimmer		Info / Angle





Original	Replacement
Auto Off	Zoom / Size
iPod Menu	Display / Media
Play Menu	Menu / Home
Radio Menu	Smart / List
Up	Up
Down	Down
Left	Left
Right	Right
OK	OK
Input Level	AV / Input / RDS
Eject iPod	Shift + Right
Eject CD	Shift + Left
Auto Preset	Picture / Format

Original	Replacement

