

 



 













 

 



 

 

 

 
 




Original	Replacement
	 Power
	 Shift + 2
	 Shift + 3
	 TV/Radio /
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Menu / Home
	 Guide / EPG / -/--
	 Setup / OPT /
	 Shift + Setup / OPT / Tools
	 Up
	 Down
	 Right
	 Left
	 OK

Original	Replacement
	 Back / Return
	 Fav / Marker / PC
	 Info / Angle
	 << / Tune-
	 I<< / Preset-
	 Play / Slow
	 Pause / Step / Freeze
	 >> / Tune+
	 >>I / Preset+
	 Stop / Hold
	 Rec / Rec Mode
	 Vol+
	 Vol-
	 Mute / Dimmer
	 CH+ / Page+
	 CH- / Page-
	 Picture / Format





Original	Replacement
NET TV Net TV	SHIFT + TV 1 Shift + 1
TELETEXT Teletext	GOTO TEXT Text / Goto
DISC MENU Disc Menu	TOP MENU D.MENU D.Menu / Top
1 1	TV 1 1
2 2	DVD 2 2
3 3	CD - STB 3 3
4 4	VIDEO 4 4
5 5	TAPE 5 5
6 6	TUNER 6 6
7 7	AUX - HDD 7 7
8 8	USB 8 8
9 9	BLUETOOTH 9 9
0 0	HDMI - SAT 0 0
SUBTITLE Subtitle	EQ SUBTITLE Subtitle / EQ
Source	RDS AV INPUT AV / Input / RDS
Ambilight	LIST SMART Smart / List

Original	Replacement

