





 
 

 



 




 
 



 
 
 
 
 
 
 
 








Original	Replacement
 Power	 Power
 I<<	 I<<
 Cancel	 Exit
 Options	 Options
 >>I	 >>I
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Rec	 Rec
 Pausa	 Pause
 Stop	 Stop
 Play	 Play
 Menu TV	 Menu
 Menu Digital	 D. Menu
 AD	 Shift + Subt
 [I]	 Guide

Original	Replacement
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 P(age) +	 Ch +
 P(age) -	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7





Original		Replacement		Original	Replacement
	8		8		
	9		9		
	0		0		
	[i+]		Info		
	P<P/Back		Pre Ch		
	[...]		Subt		
	I-II		Dual		
	[≡]		Text		
	[■]		3D		
	[<>]		Format		
	J/Smart		Smart		
	[]/Smart		Media		
	0		Back		
	AV/[?]		AV		
	[X]		Eject		
	Photo Viewer		TV/R		
	Active Control		Sleep		





 
 
 


 

 
 







Original	Replacement	Original	Replacement
 Power	 Power	 Left	 Left
 I<<	 I<<	 OK	 Ok
 >>I	 >>I	 P+	 Ch +
 Rec	 Rec	 P-	 Ch -
 Pause	 Pause	 1	 1
 Stop	 Stop	 2	 2
 Play	 Play	 3	 3
 Red	 Red	 4	 4
 Green	 Green	 5	 5
 Yellow	 Yellow	 6	 6
 Blue	 Blue	 7	 7
 Menu TV	 Menu	 8	 8
 Menu Digital	 D. Menu	 9	 9
 Guide	 Guide	 0	 0
 Up	 Up	 [i+]	 Info
 Down	 Down	 Subtitle	 Subt
 Right	 Right	 Text	 Text





Original	Replacement
 Power	 Power
 Menu Digital	 D. Menu
 Pause	 Pause
 >>I	 >>I
 I<<	 I<<
 [I]	 Guide
 Up	 Up
 OK	 Ok
 Down	 Down
 Right	 Right
 Left	 Left
 Mute	 Mute
 1	 1
 2	 2
 4	 4
 5	 5
 6	 6

Original	Replacement
 7	 7
 8	 8
 9	 9
 0	 0
 Vol+	 Vol +
 Vol-	 Vol -
 P+	 Ch +
 P-	 Ch -

