

 
 



 






 

 





 

 
 
 

 

 





 

 







 

 

 



 
 


 












Original		Replacement		Original		Replacement	
	Power DVD		Power		A-B/Repeat		Options
	Display		Info		Clear		Exit
	SYS Video		Back		FTS/Program		Sleep
	On/Off PBC		Media		Menu System		Menu
	1		1		Menu Disc		D. Menu
	2		2		Up		Up
	3		3		Down		Down
	4		4		Right		Right
	5		5		Left		Left
	6		6		OK		Ok
	7		7		Stop/Return		Stop
	8		8		Play		Play
	9		9		Pause		Pause
	0		0		>>		>>
	+10		Guide		<<		<<
	Title		Pre Ch		>		>>
	Repeat		Text		<		<<





Original	Replacement
SLOW FWD (FWD)	+ CH Ch +
SLOW REV (REV)	CH - Ch -
SUBTITLE	AD SUBT Subt
ANGLE	PICTURE FORMAT Format
ZOOM	ZOOM Eject
AUDIO	SOUND DUAL Dual
SEARCH	SEARCH TV/R TV/R
PREVIEW	B Green
SOUND MODE (MODE)	C Yellow
SOUND 3D (3D)	ECO 3D 3D
SPEAKERS (power icon)	SHIFT + [Power] Shift + Power
INPUT 1-2-3 (1-2-3)	TIMER AV AV
VOLUME +	+ VOL Vol +
VOLUME -	VOL Vol -
SPEAKERS (MUTE)	MUTE Mute
BASS +	SHIFT + [Up Arrow] Shift + Up
BASS -	SHIFT + [Down Arrow] Shift + Down

Original	Replacement
TREBLE +	SHIFT + + CH Shift + Ch +
TREBLE -	SHIFT + - CH Shift + Ch -

