




Original	Replacement
 Standby / On	 Power
 BD	 Shift + 5
 DVD	 Shift + 2
 BDR / BDR	 Shift + 7
 HDMI	 Shift + 0
 TV	 Shift + 1
 CD	 Shift + 3
 NET	 Shift + 9
 ADPT	 Shift + Guide / EPG / -/-
 iPod / USB	 Shift + 8
 SAT / CBL	 Shift + Fav / Marker / PC
 MHL	 Shift + 4
 TUNER	 Shift + 6
 Input Select ↻	 CH- / Page-
 Input Select ↻	 CH+ / Page+
 i / Status	 Info / Angle
 Volume+	 Vol+

Original	Replacement
 Volume-	 Vol-
 Mute	 Mute / Dimmer
 Audio	 Audio / Lang I/II
 Up	 Up
 Video	 Picture / Format
 Tools Menu	 Setup / OPT /
 Left	 Left
 Enter	 OK
 Right	 Right
 Home Menu	 Menu / Home
 iPod Ctrl.	 D.Menu / Top
 Down	 Down
 Return	 Back / Return
 Features PHASE	 Red / Netflix / Search
 Features ECO	 Yellow / YouTube / Repeat
 MPX	 Shift + Pause / Step / Freeze
 Pause	 Pause / Step / Freeze





Original	Replacement	Original	Replacement
 BAND	 Shift + Play /	 3	 3
 Play	 Play / Slow	 + Favorite	 Fav / Marker / PC
 PTY	 Shift + Stop /	 Audio / THX	 Sound / Title
 Stop	 Stop / Hold	 4	 4
 Preset -	 Shift + I<< / Preset-	 Signal Sel.	 TV/Radio /
 I<<	 I<< / Preset-	 MCACC	 Zoom / Size
 Preset+	 Shift + >>I / Preset+	 5	 5
 >>I	 >>I / Preset+	 6	 6
 Tune-	 Shift + << /	 CH. Level	 Text / Goto
 <<	 << / Tune-	 Disp / Auto	 Display / Media
 Tune+	 Shift + >> /	 7	 7
 >>	 >> / Tune+	 Speakers	 Shift + Audio / Lang I/II
 Auto / ALC /	 Subtitle / EQ	 Dimmer	 Shift + Mute / Dimmer
 1	 1	 8	 8
 Standard	 Smart / List	 9	 9
 2	 2	 Sleep	 Sleep / Timer
 Adv. Surr.	 Eject / Surround	 Repeat	 Green / APP / Repeat





Original	Replacement	Original	Replacement
HDMI Out	AV / Input / RDS		
0	0		
Class	Exit / Cancel / Clear		
Shuffle	Blue / Prime Video / Random		





Original	Replacement
 Standby / On	 Power
 BD	 Shift + 5
 DVD	 Shift + 2
 BDR / BDR	 Shift + 7
 HDMI	 Shift + 0
 TV	 Shift + 1
 CD	 Shift + 3
 NET	 Shift + 9
 ADPT	 Shift + Guide / EPG / -/-
 iPod / USB	 Shift + 8
 SAT / CBL	 Shift + Fav / Marker / PC
 MHL	 Shift + 4
 TUNER	 Shift + 6
 Input Select ↻	 CH- / Page-
 Input Select ↻	 CH+ / Page+
 i / Status	 Info / Angle
 Volume+	 Vol+

Original	Replacement
 Volume-	 Vol-
 Mute	 Mute / Dimmer
 Audio	 Audio / Lang I/II
 Up	 Up
 Video	 Picture / Format
 Tools Menu	 Setup / OPT /
 Left	 Left
 Enter	 OK
 Right	 Right
 Home Menu	 Menu / Home
 iPod Ctrl.	 D.Menu / Top
 Down	 Down
 Return	 Back / Return
 Features PHASE	 Red / Netflix / Search
 Features ECO	 Yellow / YouTube / Repeat
 MPX	 Shift + Pause / Step / Freeze
 Pause	 Pause / Step / Freeze

 











	Original	Replacement		Original	Replacement
	BAND	+  Shift + Play /		3	3
	Play	Play / Slow		+ Favorite	Fav / Marker / PC
	PTY	+  Shift + Stop /		Audio / THX	Sound / Title
	Stop	Stop / Hold		4	4
	Preset -	+  Shift + I<< / Preset-		Signal Sel.	TV/Radio /
	I<<	I<< / Preset-		MCACC	Zoom / Size
	Preset+	+  Shift + >>I / Preset+		5	5
	>>I	>>I / Preset+		6	6
	Tune-	+  Shift + << /		CH. Level	Text / Goto
	<<	<< / Tune-		Disp / Auto	Display / Media
	Tune+	+  Shift + >> /		7	7
	>>	>> / Tune+		Speakers	+  Shift + Audio / Lang I/II
	Auto / ALC /	Subtitle / EQ		Dimmer	+  Shift + Mute / Dimmer
	1	1		8	8
	Standard	Smart / List		9	9
	2	2		Sleep	Sleep / Timer
	Adv. Surr.	Eject / Surround		Repeat	Green / APP / Repeat





Original	Replacement	Original	Replacement
 HDMI Out	 AV / Input / RDS		
 0	 0		
 Class	 Exit / Cancel / Clear		
 Shuffle	 Blue / Prime Video / Random		

