









 












 














Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide / EPG / -/--
 Recall	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Original	Replacement
 Blue	 Blue / Prime Video / Random
 Source	 AV / Input / RDS
 Vol+	 Vol+
 Vol-	 Vol-
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Audio	 Audio / Lang I/II
 Aspect	 Eject / Surround
 Display	 Display / Media
 Tv/Radio	 TV/Radio /
 Rec	 Rec / Rec Mode
 Up	 Up
 Left	 Left
 OK/CH List	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home





Original	Replacement
Exit	Exit / Cancel / Clear
EPG	Guide / EPG / -/--
P.Mode	Picture / Format
S.Mode	Sound / Title
Sleep	Sleep / Timer
Text	Text / Goto
PVR/Hold	Setup / OPT /
Size	Zoom / Size
FAV	Fav / Marker / PC
Play	Play / Slow
Pause/Timeshift	Pause / Step / Freeze
Stop/Auto	Stop / Hold
Reveal	D.Menu / Top
Subtitle	Subtitle / EQ
<</Nicam	<< / Tune-
>>/Freeze	>> / Tune+
I<</Index	I<< / Preset-

Original	Replacement
>>I/Subpage	>>I / Preset+

