



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	S.Mode		Sound / Title
	Audio/Reveal		Audio / Lang I/II
	Zoom/Subpage		Subtitle / EQ
	P.Mode		Picture / Format
	Size		Zoom / Size
	Sleep		Sleep / Timer
	D.Menu		D.Menu / Top
	Text		Text / Goto
	Input		AV / Input / RDS
	LCD Menu		Menu / Home
	Up		Up
	Index		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Recall		Back / Return
	Vol+		Vol+
	DVD Setup		Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	Display		Display / Media
	CH-		CH- / Page-
	1		1
	2		2





Original	Replacement
3	3
4	4
5	5
6	6
7	7
8	8
9	9
-/--	GUIDE EPG
0	0
AUTO	Auto
PROGRAM	Red / Program
INTRO	Green / Intro
REPEAT	Yellow / Repeat
A-B	Blue / A-B
HOLD	Hold
TITLE	Title
NICAM	Nicam

Original	Replacement
ASPECT	Aspect
D.SUB	D.Subt.
GOTO	Goto
ANGLE	Angle
PGUP SLOW	Slow/PgUp
D.DISP	D.Disp
PGDW STE	Step/PgDn
SHIFT + FORMAT PICTURE	Shift + Picture / Format
SHIFT + SIZE ZOOM	Shift + Zoom /
SHIFT + GOTO TEXT	Shift + Text /
SHIFT + ANGLE INFO	Shift + Info / Angle
SHIFT + CH PAGE	Shift + CH+ /
SHIFT + MEDIA DISPLAY	Shift + Display / Media
SHIFT + CH PAGE	Shift + CH- /

