 
 

















Original	Replacement	Original	Replacement
	POWER		Power
	MUTE		Mute / Dimmer
	P. MODE		Picture / Format
	S. MODE		Sound / Title
	TV / RADIO		TV/Radio /
	NICAM		Shift + Audio / Lang I/II
	DISPLAY		Display / Media
	ZOOM / PC.A		Shift + Zoom /
	SLEEP		Sleep / Timer
	EDIT		Shift + Text /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Shift + Guide / EPG / -/--
	0		0
	BACK		Back / Return
	REC. MENU		D.Menu / Top
	PLAY / PAUSE		Play / Slow
	SKIP PREV		I<< / Preset-
	SKIP NEXT		>>I / Preset+
	REC		Rec / Rec Mode
	STOP		Stop / Hold
	REW		<< / Tune-
	FWD		>> / Tune+
	CH+		CH+ / Page+
	SOURCE		AV / Input / RDS
	VOL+		Vol+
	CH-		CH- / Page-





Original	Replacement
 VOL-	 Vol-
 MENU	 Menu / Home
 EXIT	 Exit / Cancel / Clear
 UP	 Up
 LEFT	 Left
 OK	 OK
 RIGHT	 Right
 DOWN	 Down
 FAV	 Fav / Marker / PC
 EPG	 Guide / EPG / -/--
 USB	 Shift + 8
 ON/OFF SETUP / ON/OFF	 Setup / OPT /
 MIX / MENU	 Smart / List
 INDEX / PCB	 Text / Goto
 SIZE ZOOM / SIZE	 Zoom / Size
 REVEAL / SUBT. / REP.	 Shift + Green / APP /
 SUBTITLE A-B	 Subtitle / EQ

Original	Replacement
 UPDATE / A-B	 Shift + Yellow / YouTube /
 SUBPAGE /	 Audio / Lang I/II
 HOLD / FRE. / SUB. T.	 Shift + Stop /
 RED / INFO	 Shift + Info / Angle
 RED / INFO	 Red / Netflix / Search
 Green / Angle	 Info / Angle
 Green / Angle	 Green / APP / Repeat
 YELLOW / SLOW	 Yellow / YouTube / Repeat
 BLUE / EJECT	 Blue / Prime Video / Random
 EJECT	 Eject / Surround

