
 










Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu
 Mute	 Mute	 EPG	 Guide
 1	 1	 Exit	 Exit
 2	 2	 Up	 Up
 3	 3	 Down	 Down
 4	 4	 Right	 Right
 5	 5	 Left	 Left
 6	 6	 OK	 Ok
 7	 7	 CH+	 Ch +
 8	 8	 CH-	 Ch -
 9	 9	 Vol+	 Vol +
 0	 0	 Vol-	 Vol -
 FAV	 +  PRE-CH Shift + Pre Ch	 Red	 Red
 Recall	 PRE-CH Pre Ch	 Green	 Green
 Game	 MEDIA Media	 Yellow	 Yellow
 Auto	 SMART Smart	 Blue	 Blue
 Info	 INFO Info	 Zoom	 Eject





Original	Replacement	Original	Replacement
 Lan/Audio	 Dual		
 Play	 Play		
 Pause	 Pause		
 <<	 <<		
 >>	 >>		
 Text	 Text		
 Tv/Radio	 TV/R		
 Subtitle	 Subt		

