

 
















 



 

 





 

 


 
 





 

 



 

 



 




 


 








Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol +
 Mute	 Mute	 Vol-	 Vol -
 1	 1	 OK	 Ok
 2	 2	 Up	 Up
 3	 3	 Down	 Down
 4	 4	 Right	 Right
 5	 5	 Left	 Left
 6	 6	 Menu	 Menu
 7	 7	 Exit	 Exit
 8	 8	 Sleep	 Sleep
 9	 9	 Aspect	 Format
 0	 0	 Rec	 Rec
 Recall	 Pre Ch	 Red/DVD-Setup	 Red
 PR.List	 List	 Green/Repeat	 Green
 Source	 AV	 Yellow/Languag	 Yellow
 CH+	 Ch +	 Blue/DVD-Menu	 Blue
 CH-	 Ch -	 Title/PC Auto	 Options





Original	Replacement	Original	Replacement
	Zoom/Tv/Radio		TV/R
	I/II/Audio		Dual
	Subtitle		Subt
	Info/Display		Info
	Step/Freeze		Back
	Prog/Index		Media
	A-B/Reveal		D. Menu
	Text/Eject		Text
	Play/Size		Play
	Pause/Subpage		Pause
	Stop/Hold		Stop
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>
	S.Mode	+	Shift + Dual
	Pic.Mode	+	Shift + Format
	Rec List	+	Shift + Subt

