



Original	Replacement	Original	Replacement
Power	Power	Left	Left
Mute	Mute / Dimmer	OK	OK
1	1	Right	Right
2	2	DVD Menu	D.Menu / Top
3	3	Down	Down
Open/Close/Tv	Eject / Surround	Exit	Exit / Cancel / Clear
4	4	Vol+	Vol+
5	5	Sound	Sound / Title
6	6	CH+	CH+ / Page+
Recall/Goto	Fav / Marker / PC	Vol-	Vol-
7	7	PIC	Picture / Format
8	8	CH-	CH- / Page-
9	9	Sleep	Sleep / Timer
0	0	Aspect	Shift + Picture / Format
Tv Menu	Menu / Home	Rec/DVD Setup	Rec / Rec Mode
Source	AV / Input / RDS	Tv/Radio	TV/Radio /
UP	Up	Text	Text / Goto

Original	Replacement	Original	Replacement
Power	Power	Left	Left
Mute	Mute / Dimmer	OK	OK
1	1	Right	Right
2	2	DVD Menu	D.Menu / Top
3	3	Down	Down
Open/Close/Tv	Eject / Surround	Exit	Exit / Cancel / Clear
4	4	Vol+	Vol+
5	5	Sound	Sound / Title
6	6	CH+	CH+ / Page+
Recall/Goto	Fav / Marker / PC	Vol-	Vol-
7	7	PIC	Picture / Format
8	8	CH-	CH- / Page-
9	9	Sleep	Sleep / Timer
0	0	Aspect	Shift + Picture / Format
Tv Menu	Menu / Home	Rec/DVD Setup	Rec / Rec Mode
Source	AV / Input / RDS	Tv/Radio	TV/Radio /
UP	Up	Text	Text / Goto



