 




















Original	Replacement
	Power
	3D
	Mute
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Timer
	Audio
	Menu
	Info

Original	Replacement
	EPG
	Exit
	Up
	Left
	Ok
	Right
	Down
	Vol +
	Vol -
	Prog -
	Prog +
	Liste
	Text
	S-T
	TV / R
	Play / Pause
	Pause



[illegible]