

 
 







 
 

 

 

 
 

 
 

 
 
 

 


 




 

 

 






 





 





 





Original	Replacement	Original	Replacement
On/Off	 Power	Menu Right	 Right
Mute	 Mute	Menu Off	 Exit
Update	 Format	Display	 Shift + Info
Txt Stop	 Stop	Menu Down	 Down
Reveal	 3D	Back	 Back
Info	 Info	Menu audio	 Dual
Subt.List	 Subt	Volume+	 Vol +
Sleep Timer	 Sleep	Chan.Up	 Ch +
Return TV	 TV/R	Volume-	 Vol -
Menu video	 D. Menu	Chan.Down	 Ch -
Txt Expand	 Eject	1	 1
Text	 Text	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Menu Left	 Left	6	 6
OK Enter	 Ok	7	 7



Original	Replacement	Original	Replacement
8	 8	Contrast+	 >>
9	 9	Contrast-	 <<
Guide -/-- 1.	 GUIDE	Surround	 +  Shift + Red
0/10	 0	Nicam/Mono	 +  Shift + Green
2.Fav P/C 2.	 PRE-CH	Level L	 +  Shift + Yellow
Red	 Red	Level R/Woofer	 +  Shift + Blue
Green	 Green		
Off/Tim	 MEDIA		
On/Tim	 SMART		
Mix Scan	 LIST		
Tone-	 Pause		
Color- S.Std	 <<		
Color+ P.Std	 >>		
Yellow	 Yellow		
Blue	 Blue		
Audio-	 +  Shift + Vol -		
Audio+	 +  Shift + Vol +		

