




 

 


 









 







 










Original		Replacement		Original		Replacement	
	Power		Power		TV		TV/R
	1		1		AV		AV
	2		2		Up / P+		Up
	3		3		Up / P+		Ch +
	4		4		Down / P-		Down
	5		5		Down / P-		Ch -
	6		6		Right / V+		Right
	7		7		Right / V+		Vol +
	8		8		Left / V-		Left
	9		9		Left / V-		Vol -
	0		0		Menu		Menu
	Mute		Mute		Menu		Ok
	16:9		Format		S / M / D		Smart
	Red		Red		Recall		Pre Ch
	Green		Green		Recall		Back
	Yellow		Yellow		≡		Text
	Blue		Blue		/≡		Options





Original		Replacement		Original	Replacement
	≡o	 SLEEP	Sleep		
	≡i	 DISPLAY INFO	Info		
	Hold	 II	Pause		
	Size	 ZOOM	Eject		
	≡X	 CLEAR EXIT	Exit		
	≡?	 E-MANUAL D.MENU	D. Menu		
	PP	 APP MEDIA	Media		
	i	 SHIFT +  DISPLAY INFO	Shift + Info		

